

INSTALLATION INSTRUCTIONS


583M/587M

SERIES


LIGHTSCAPER® LOUVERLIGHTS



Outdoor Lighting

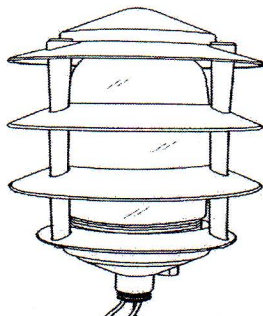

583M-XX

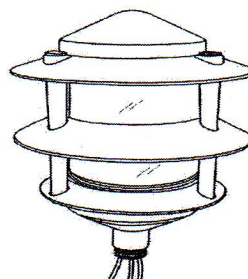

587M-XX

SAFETY PRECAUTIONS

Before starting the installation, disconnect the power by turning off the circuit breaker. Turning the power off by using the light switch is not always sufficient to prevent electrical shock. All work should be done by a qualified electrician.

INSTALLATION

Electrical connections: The white fixture wire to the white (neutral) supply wire, the black fixture wire to the black (Hot) supply wire and the green fixture wire to the green (Ground) supply Wire.

Unit supplied with 1/2" nipple for use with NM-BC, 1414 ground Box/Covers and 1031-3 Spike.

For use on 1/2" conduit or threaded accessories, remove nipple.

- 1 Turn off power.
- 2 Remove three rubber plugs on the head assembly.
- 3 Loosen the screws, rotate counter-clockwise and then remove cap and louvers
- 4 Remove glass lens from fixture. Insert a bulb into the lampholder and then tighten the bulb clockwise to the lampholder base. **USE ONLY CORRECT LAMP TYPE AND DO NOT EXCEED MAXIMUM WATTAGE INDICATED ON THE SOCKET**
- 5 Replace the glass lens. Tighten for seal against gasket. Fasten the screws and insert three plugs.

TROUBLESHOOTING CHECKLIST

If light does not work;

Check To Insure Proper Seating Of Lamp.
Check If Lamp Filament Burned Out/install known good lamp.
Turn Off Power, Check Electrical Connections.

