


# INSTALLATION INSTRUCTIONS FOR MIC-SPC

## STEPS:

1. Loosen the two lens frame mounting screws (A).
2. Align slots on leg of polycarbonate shield (B) with screws (A) and slide under screw head. Be sure that other leg of polycarbonate shield is positioned under lens frame lip. (See Figure).
3. Tighten the two lens frame mounting screws (A).
4. Tighten two polycarbonate shield mounting screws (C).

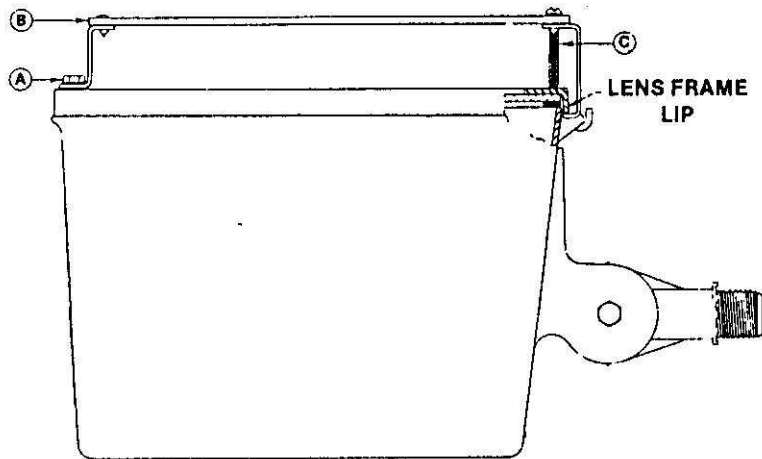

Hubbell Lighting, Inc.  
A Subsidiary of Hubbell Incorporated  
2000 Electric Way  
Christiansburg, VA 24073-2500  
(703) 382-6111  
FAX (703) 382-1526

268-0455-9902